

As The title says a 'how to guide' for changing the colour of your window/mirror switches

**Tools Needed:**

- Soldering Iron
- Replacement LEDs 3mm x4
- Replacement Resistors (5 Band) x4
- Very Small Flathead Screwdriver x2
- Pocket Knife

**Step 1:** Remove Window Controller Switch From Car (I used a pocket knife to wedge it out)



**Step 2:** Remove Middle Window Switch

To do this i wedged a screw drive on each side of the clips:



### Step 3: Expose the Circuit Board



Once again using a small screw driver to pry open the clips.

### Step 4: Replace LEDs + Resistor

The Original Circuit Board (Note that the smaller rubber circles are near the solder marks.)



New LED + Resistor





Then Put Switch Back together



Make Sure the white clips are still in the switch, they may come out when taking it apart.  
Make Sure LEDs are in the correct way when soldering  
**Repeat from Step 2 to 4 For all Window Switches.**

**Step 5:** Disassemble Mirror Switch  
Remove Black base from the Switch





Then Remove black base from circuit board:







**Step 7:** Put Mirror Switch back together, making sure that the red part on the circuit board fits in the black groves of the black base:







**The Results:  
From This:**



**To This:**

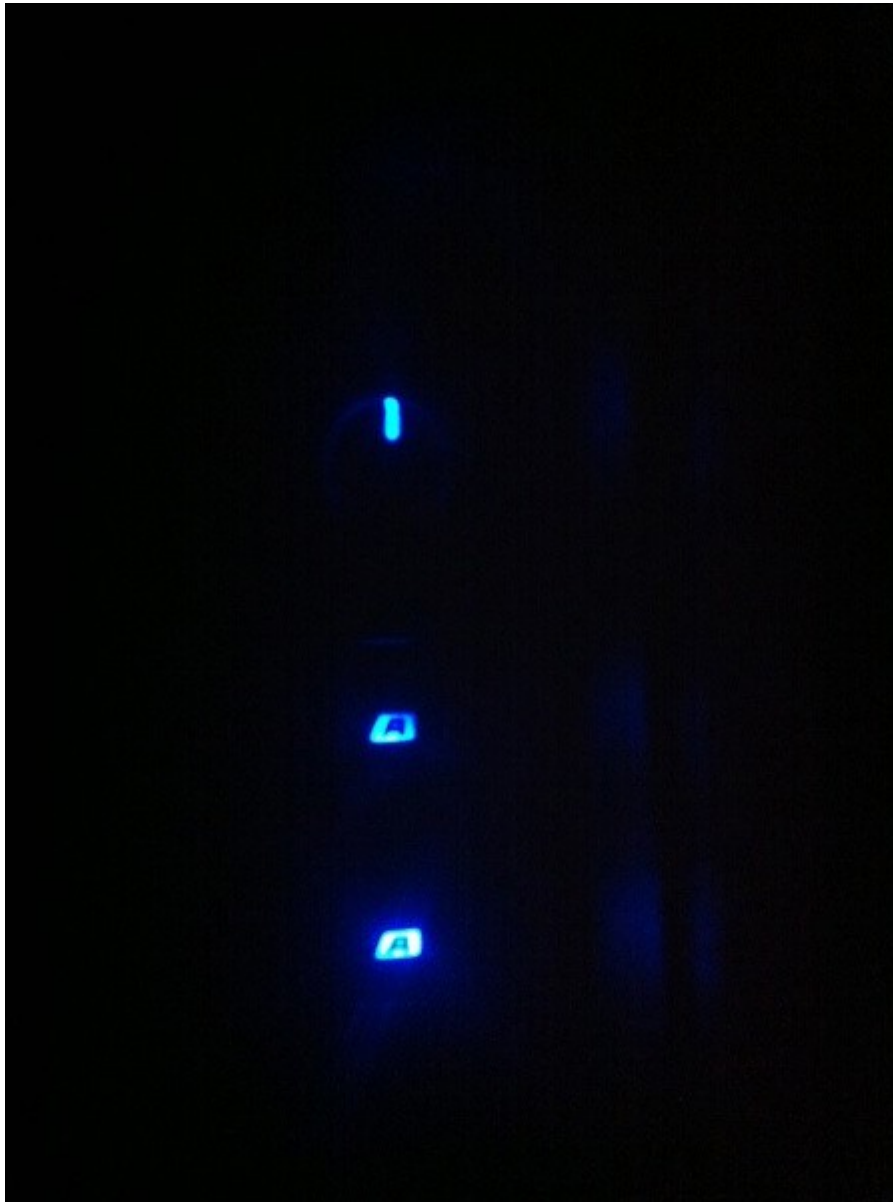

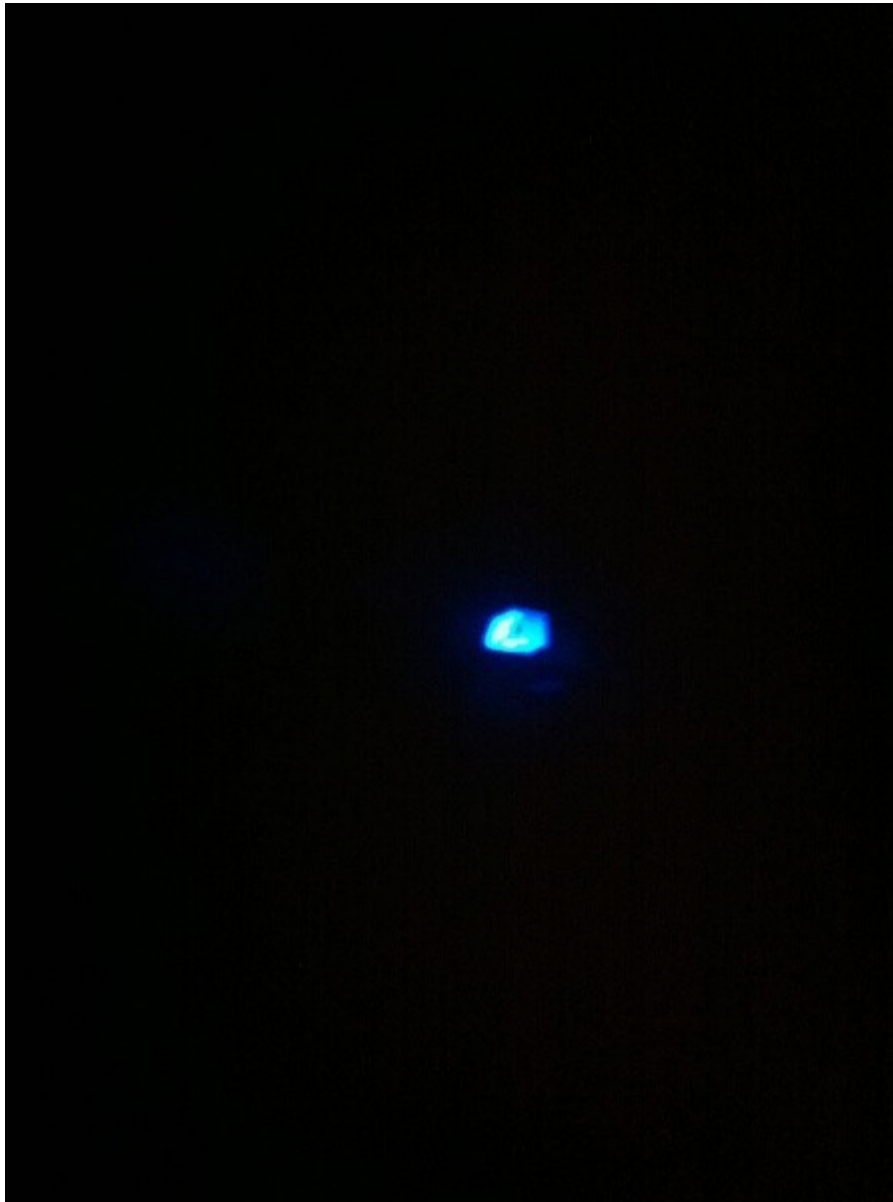

Time taken: 1 hour